

PEX

Pinch Clamp Removal Tool



1. Slide the pinch clamp nub into the removal tool slot. If the nub is too large to fit into the tool, use the clamp tool to pinch the clamp one more time.



2. Twist the nub with the tool until the clamp breaks or loosens.



3. Remove the tool from the clamp, then remove the clamp from the pipe.

Tool head can be removed and used on a standard 1/2" socket wrench.

Removes 3/8-1 in. stainless steel pinch clamps

Crimp Ring Removal Tool available:
69PTKD0009 - Removes 1/2" - 1" copper crimp rings



"Apollo" **PEX**

Conbraco Industries, Inc.
Matthews, NC 28105
1.888.229.2874
www.apolloflow.com