


Removal tool.

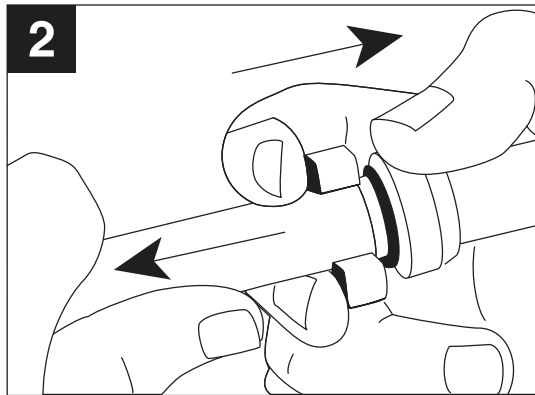

Place tool around pipe next to fitting. Press tool toward fitting while pulling pipe from fitting.